SERVICE INSTRUCTIONS

Before use, read these instructions carefully, and follow them for correct use.

Shifting Lever

SL-A451
SL-A351

SIS Compatible



EXAGE

Type

Rear: SIS 6-speed/friction system
Front: SIS (double gear only)/friction system/cable adjustment mechanism

Note


The following products should be used together for the Shimano Index System (SIS) function.

- Shifting Lever.....SL-A451/SL-A351
- Front Derailleur.....FD-A451/FD-A351
- Front Chainwheel.....FC-A450/FC-A350
- Rear Derailleur.....RD-A450/RD-A350
- Freehub, Freewheel (6 speeds).....FH-A450/FH-RM50/HB-RA50/MF-Z012/CS-1000
- Chain.....Shimano UG chain (narrow chains cannot be used)
- Outer Cable.....Shimano SIS cable


Because the high cable resistance of a frame with internal cable guides would impair the SIS function, this type of frame should not be used.

Shifting lever installation

Refer to the illustration of the disassembled parts below when installing.

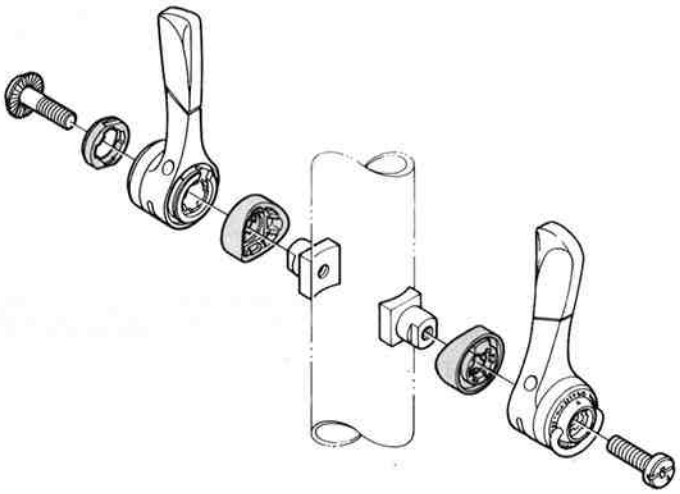

Installation of the front shifting lever

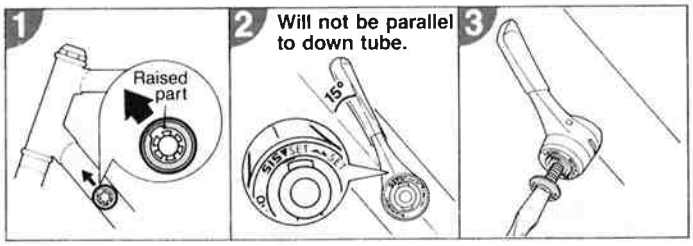

Set so the raised part of the lever shift cover is facing forward.


Set the shifting indicator to the SIS position, and set the lever to the (initial) low position.

Tighten the lever bolt to secure the lever.


Torque in the SIS mode: 25—30 kgfcm

Selection of the front shifting mode

1. Take off the fixing bolt.

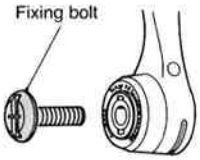


2. Turn the shifting indicator 90° to change the mode.

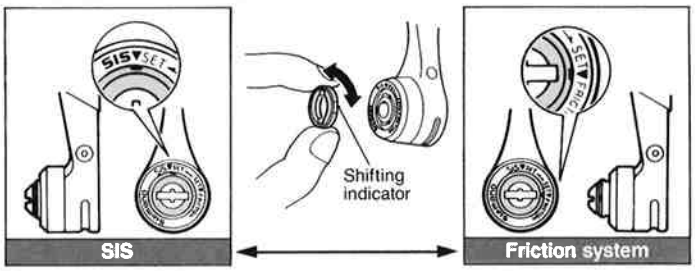

Note:
When friction system mode is selected, the indicator will be slightly raise. The amount of friction can be adjusted by the degree that the fixing bolt is tightened.

Installation of the rear shifting lever

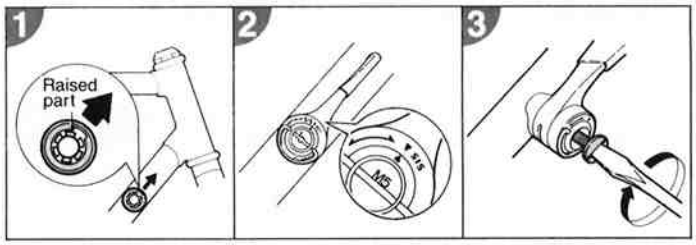

Set so the raised part of the lever shift cover is facing forward.


Install so the SIS▼ mark and the red arrow▲ are aligned.

Tighten the lever fixing bolt.

Tightening torque: 25—30 kgfcm

Selection of the rear shifting mode

Turn the ring to change to SIS or friction.
Turn the ring all the way to the ▼SET position.

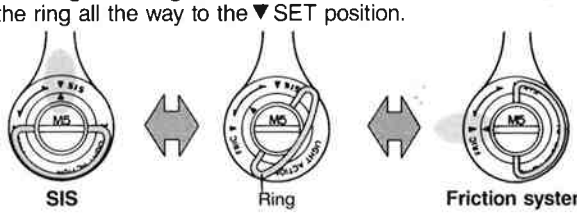

SHIMANO

SHIMANO AMERICAN CORPORATION
One Shimano Drive, Irvine, California U.S.A. 92718 Tel. (714) 951-5003

SHIMANO (EUROPA) GmbH.
Im Hülsenfeld 13 4010 Hilden, West Germany Tel. 02103-5005-0

SHIMANO (SINGAPORE) PTE. LTD.
No. 20, Benoi Sector, Jurong Town, Singapore 2262 Tel. 2654777

SHIMANO INDUSTRIAL CO., LTD.
3-77 Oimatsucho, Sakai, Osaka, Japan Tel. (0722) 23-3243

Please note: Specifications are subject to change for improvement without notice. (English)

© Jun. 1988 by Shimano Co., Ltd. R-34 XBC IZM Printed in Japan